

### **Resyncing your slide-out:**

- 1- If possible, start with the slide room already in all the way
- 2- push the out button only for a second until you hear the motor engage and the room moves slightly.
- 3- push the in button only for a second until you hear the motor engage and the room moves slightly.
- 4- repeat 2 & 4 at least 3-4 times

\*be sure to always hold the slide out in/out button a few seconds after all the noises stop to ensure the process is completed. There will be times that after you push the button and the slide is in or out all the way that the system is not done with its internal sync and may through the slide out of time if the buttons are not held for the full duration.